
COOKTOP PARTS


For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1 (Designer White) (Designer Biscuit) (Black) (Black Stainless)

30" GAS FREESTANDING SELF CLEAN RANGE SEALED BURNER

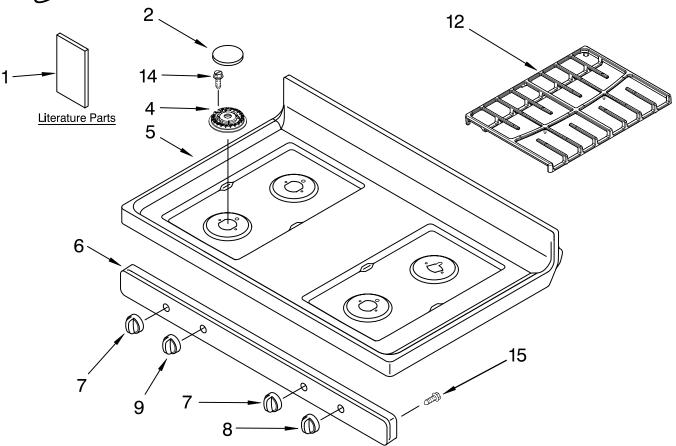

| Illus No. | | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION |
|--------------|------------|--------------------|---------------|--------------------|-------------------|---------------|--------------------|-------------------|
| | 110. | | | 140. | _ | - | 110. | |
| 1 | W40460040 | Literature Parts | 4 | 1155001 | Burner | 8 | 0272200 | Knob, Accusimmer |
| | W 10162212 | Guide, Use & Care | | 4455981 4455980 | | | 8273280 8522625 | |
| | W10041630 | Tech Sheet | | 4455979 | | | 8522628 | |
| | | (English) | 5 | 4433313 | Cooktop | 9 | 0322020 | Knob, Powerburner |
| | 9702903 | Instructions, | 3 | 8272251 | | " | 8273281 | |
| | | Installation | | 8272253 | | | 8522624 | |
| | 9762997 | (English) | | 8272743 | | | 8522627 | |
| | | (Spanish) | 6 | 02/2/10 | Panel, Manifold | 12 | 0022021 | Grate |
| | 9757143 | | Ŭ | 8523855 | | '- | 9762228 | |
| | 0.0 | Safer Cooking Tips | | 8523854 | | | | Espresso |
| | 9762761 | (English) | | 8523856 | Biscuit | | 9763283 | |
| | W10065852 | | 7 | | Knob, Control (2) | 14 | 3400701 | |
| 2 | | Cap, Burner | | 8273279 | | 15 | 3196557 | Screw |
| | | LR | | 8522623 | White | | | |
| | 3192487 | Black | | 8522626 | Biscuit | | | |
| | 9763244 | Grey | | | | | | |
| | 9763248 | Espresso | | | | | | |
| | | LF – RF | | | | | | |
| | 3192488 | | | | | | | |
| | 9763243 | | | | | | | |
| | 9763247 | Espresso | | | | | | |
| | 0400400 | RR | | | | | | |
| | 3192486 | | | | | | | |
| | 9763242 | | | | | I | | |
| | 9763246 | Espresso | | | | | | |


DRAWER & BROILER PARTS
For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1
(Designer White) (Designer Biscuit) (Black) (Black Stainless)

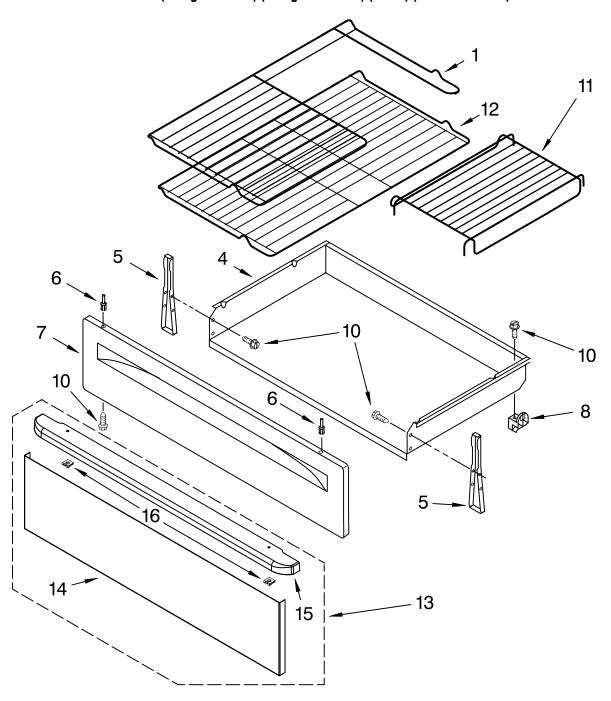

| Illus. No. | Part No. | DESCRIPTION | Illus No. | | DESCRIPTION | Illus No. | . Part No. | DESCRIPTION |
|---------------|-------------|--------------------|--------------|-----------|--------------------|--------------|---------------|------------------|
| 1 | 8274021 | Rack, Partial | 7 | | Panel, Drawer Frnt | 10 | 3196168 | Screw |
| 4 | 9761031 | Drawer, Storage | | 8053336 | White | 11 | 8274022 | Rack, Insert |
| 5 | 3196817 | Bracket, Drawer(2) | | 8053338 | Black | 12 | W10138079 | Rack, Oven |
| 6 | | Rivet, Push (2) | | 8272502 | Biscuit | 13 | | Stnlss Mdl Only |
| | 3196814 | White | 8 | | Spacer, Glide | 14 | 9755797 | Panel,Stnlss Stl |
| | 3196815 | Almond | | 8053334 | White,Blk,Biscuit | 15 | 9762251 | Handle, Drawer |
| | 3196813 | Black | | W10133364 | Stainless Steel | 16 | 9781235 | Speed Clip |

MANIFOLD PARTS

For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1 (Designer White) (Designer Biscuit) (Black) (Black Stainless)

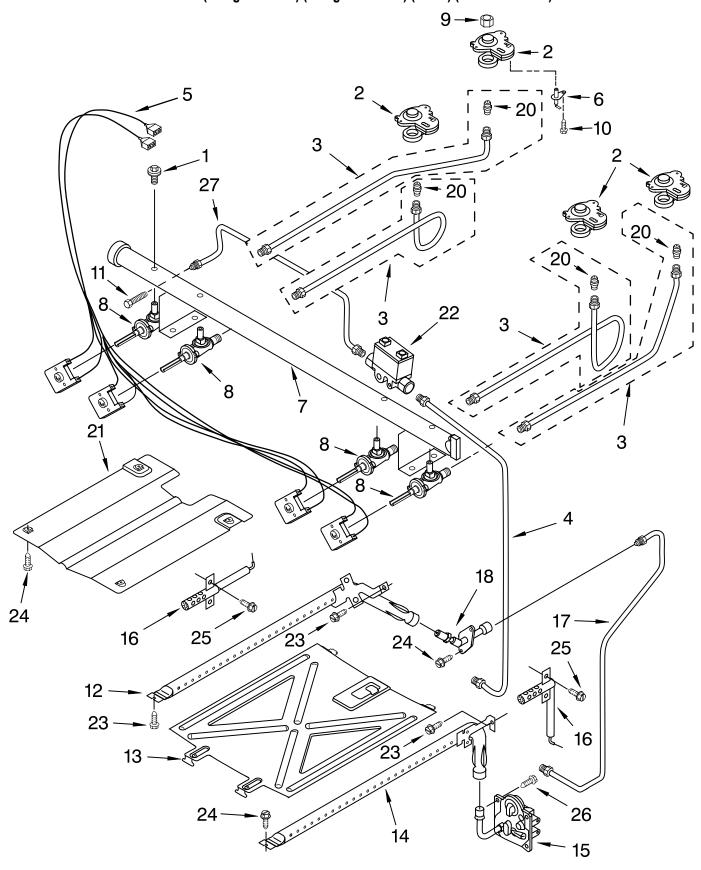

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MANIFOLD PARTS


For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1 (Designer White) (Designer Biscuit) (Black) (Black Stainless)

| Illus. No. | Part No. | DESCRIPTION |
|---------------|--------------------|------------------------------------|
| 1 | 8273096 | Screw, Valve |
| 2 | | Burner Base |
| | 8273700 | Large (3) |
| _ | 8273701 | Small (1) |
| 3 | | Tubing, Burner |
| | 8273692 | W/Orifice Left Front |
| | 8273694 | Left Rear |
| | 8273696 | Right Front |
| | 8273697 | Right Rear |
| 4 | 8523433 | Tubing (Manifold |
| | | to Regulator) |
| 5 | 8523406 | Harness, Igniter |
| 6 | 0500700 | (W/Switches) |
| 6 7 | 8523793 9762230 | Electrode (4) Pipe, Manifold |
| 8 | 3102230 | Valve |
| · | 9757218 | LF – RF – LR |
| | 8273004 | Right Rear |
| 9 | 8273060 | Nut (4) |
| 10 | 8273062 | Screw (4) |
| 11 | 3400228 | Bolt |
| 12 13 | 8054078 8053970 | Burner, Broiler Spreader, Flame |
| 13 | 0033310 | (Oven) |
| 14 | 9758078 | Burner, Bake |
| 15 | 9761959 | Burner, Bake Valve/Regulator |
| 16 | | Igniter |
| | 8054129 | Broil |
| 17 | 9758079 8272222 | Bake |
| 17 | 0212222 | Tubing (Broiler Fitting To Valve) |
| 18 | 3186489 | Fitting, Broiler |
| 20 | | Orifice, Burner |
| | 8273065 | Left Front |
| | 8273064 | Right Front |
| | 8273065 | Left Rear |
| 21 | 8273067 8053262 | Right Rear |
| 21 | 8053262 | Spreader, Flame (Broiler) |
| 22 | 9758382 | Valv–Soln/Shtoff |
| 23 | 3196265 | Screw |
| 24 | 3196176 | Screw |
| 25 | 3196385 | Screw |
| 26 | 3400016 | Screw |
| 27 | 8272470 | Tube(GPR-Shutoff) |

Following Parts Not Illustrated

8523420 Spuds, LP Gas (Kit of 4)

CHASSIS PARTS
For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1
(Designer White) (Designer Biscuit) (Black) (Black Stainless)

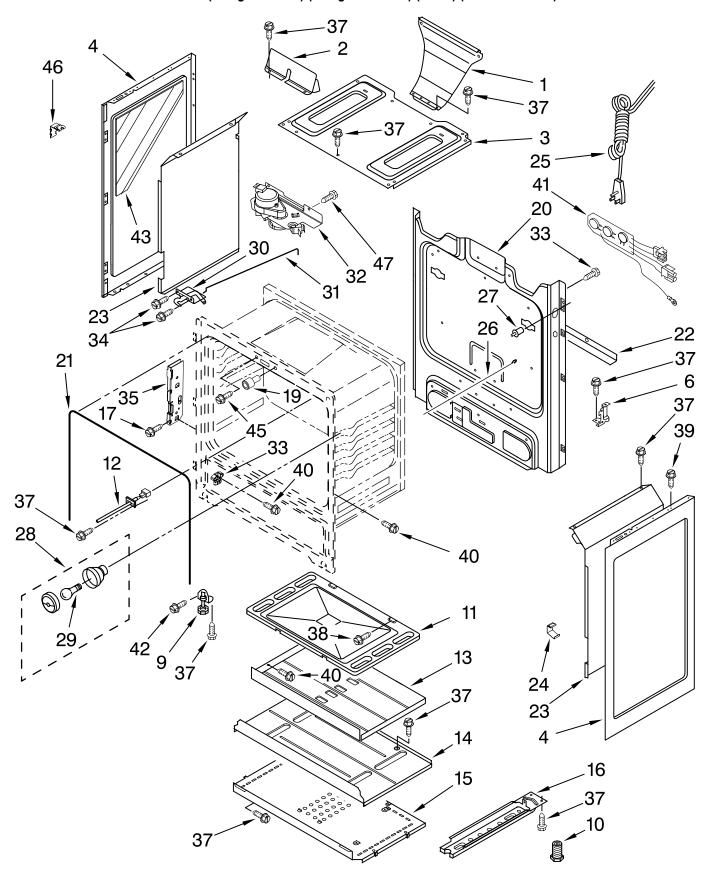


CHASSIS PARTS

For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1 (Designer White) (Designer Biscuit) (Black) (Black Stainless)

| Illus No. | | DESCRIPTION | Illus No. | | DESCRIPTION | Illus No. | . Part No. | DESCRIPTION |
|--------------|-----------|--------------------|--------------|-----------|-------------------|--------------|---------------|------------------|
| 1 | W10153186 | | 19 | 9758701 | Spacer, Door | 35 | | Brkt-Mounting |
| 2 | | Shield, Flue | 20 | 9757098 | | 37 | 3196178 | Screw |
| 3 | 8273036 | Burner Box | 21 | 8522416 | Seal, Oven | 38 | 3196152 | Screw |
| 4 | | Panel, Side (2) | 22 | 8053971 | Brace, Main Back | 39 | | Screw |
| | 8053830 | White-Textured | 23 | | Retainer, Insul. | | 3196166 | White |
| | 8272519 | Biscuit-Textured | | 9761449 | Left Hand | | 3196167 | Almond |
| | 8053832 | Black-Textured | | 9761448 | Right Hand | | 3196168 | Black |
| 6 | 8523249 | Brkt, Manifold Mtg | 24 | 3196576 | Clip, Panel (6) | 40 | W10067840 | Screw |
| 9 | 3196037 | Foot, Front (2) | 25 | | Cord, Power | 41 | 9756911 | Suppressor |
| 10 | | Foot, Rear (2) | 26 | 9757239 | Rod – Dr Switch | 42 | 3196179 | Screw |
| 11 | | Bottom, Oven | 27 | 9757262 | Switch, Door | 43 | 9761490 | Insulation |
| 12 | W10131826 | Sensor, Oven | 28 | 3196701 | Light Socket Assy | 45 | 3196168 | Screw |
| 13 | 8053967 | Baffle, Burner | 29 | 311255 | Bulb, Oven Light | 46 | 9761512 | Clip – Mounting |
| 14 | 8053969 | Shield, Heat | 30 | 9761013 | Latch, Door | 47 | 3196160 | Screw |
| 15 | 8053968 | Shield, Lower | 31 | W10078370 | Rod, Latch | | | |
| 16 | 9760314 | Rail, Base (2) | 32 | W10107820 | Latch-Mtr | INS | ULATION | |
| 17 | W10031780 | Screw | 33 | W10114344 | Glide, Drawer (2) | | | |
| | | | 34 | | Screw (2) | | 8524099 | Insulation, Wrap |
| | | | | | · , | | 8272614 | Insulation, Back |

CONTROL PANEL PARTS
For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1
(Designer White) (Designer Biscuit) (Black) (Black Stainless)

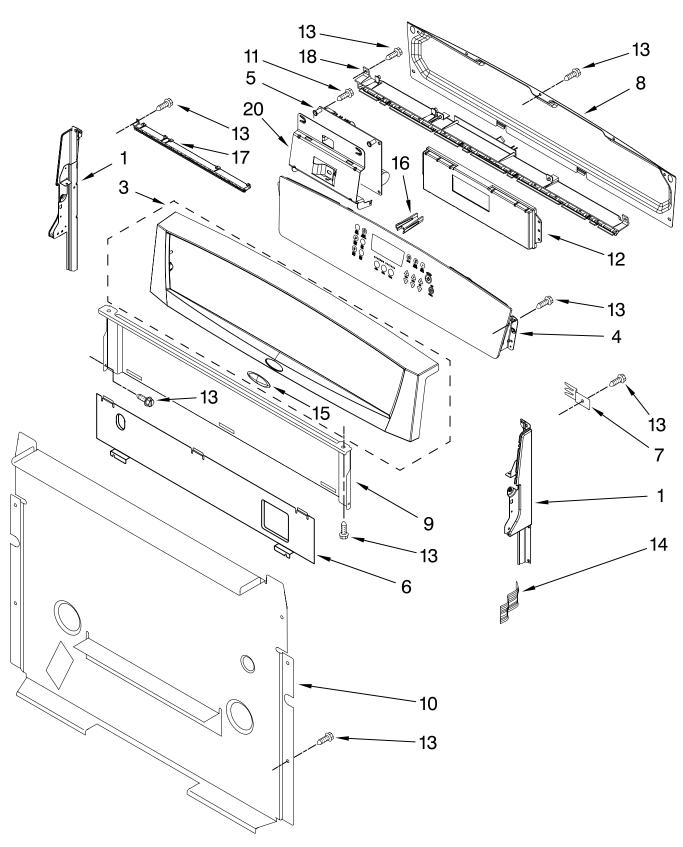


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS
For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1
(Designer White) (Designer Biscuit) (Black) (Black Stainless)

| IIIus No. | | DESCRIPTION |
|--------------|--------------------|------------------------------|
| 1 | | Endcap, Left Hand |
| | W10009080 | Black |
| | W10009040 | |
| | W10009060 | Biscuit |
| | 14440000000 | Endcap, Right Hand |
| | W10009090 | Black |
| | W10009050 | White |
| 3 | W10009070 | Biscuit Panel, Control |
| 3 | 9762586 | Black |
| | 9762585 | |
| | 9762587 | |
| | 9762588 | |
| 4 | | Bracket, Control |
| | 9763256 | White |
| | 9763262 | Black |
| | 9763252 | Biscuit |
| 5 | 9758080 | Module, Spark |
| 6 | 8053505 | Shield,Lower Heat |
| 7 | 8523412 | Bracket, Support |
| 8 | 9756366 | Cover, Upper |
| 9 10 | 8053910 9760190 | Shield, Heat Cover, Lower |
| 11 | 8273564 | Clip, Upper Cover |
| 12 | W10116542 | Control, Range |
| 13 | 3196178 | Screw |
| 14 | W10155287 | Cnnctr Cbl, Flex |
| 15 | 9757613 | Nameplate |
| 16 | 9757490 | Support, Glass |
| 17 | 9762589 | Module, Light |
| 18 | 9762855 | Brkt-Mntg, Console |
| 20 | 9762253 | Bracket, DSI |

DOOR PARTS
For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1
(Designer White) (Designer Biscuit) (Black) (Black Stainless)

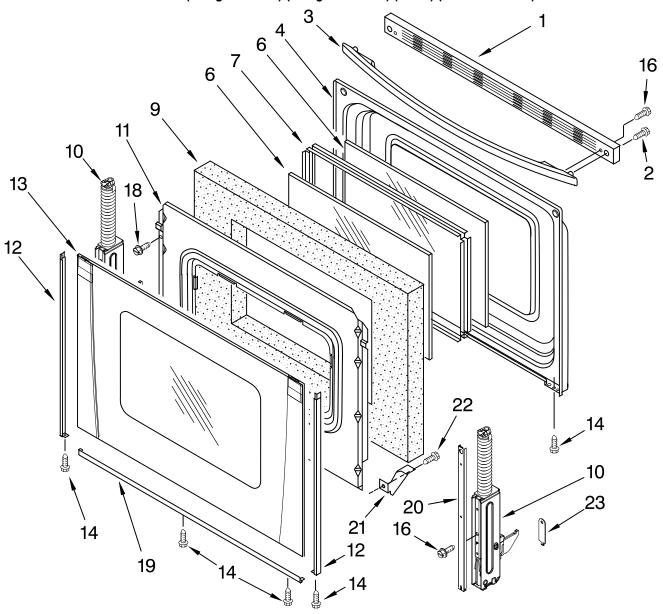

| IIIus. No. | Part No. | DESCRIPTION | Illus No. | | DESCRIPTION | Illus No. | | DESCRIPTION |
|---------------|-------------|------------------|--------------|-----------|------------------|--------------|-----------|--------------------|
| 1 | | Trim, Top | 9 | | Insulation, Door | 13 | | Glass, Outer Door |
| | 9762391 | Black | 10 | 9761496 | Hinge, Door | | W10010680 | Black |
| | 9761975 | White | 11 | 9761357 | Retainer, Insul. | | W10010660 | White |
| | 9761976 | Biscuit | 12 | | Trim, Door Side | | W10010670 | Biscuit |
| | 9761977 | Stainless Steel | | | Left Hand | 14 | 3196160 | Screw |
| 2 | 3196164 | Screw | | W10113926 | Black | 16 | W10031780 | Screw |
| 3 | | Handle, Door | | 8523172 | White | 18 | W10031790 | Screw |
| | 9761979 | Black | | 8523173 | Biscuit | 19 | | Trim, Bottom |
| | 9761978 | White | | 9762249 | Universal Silver | | 8523177 | Black |
| | 9761980 | Biscuit | | | Right Hand | | 8523175 | White |
| | 9761981 | Stainless Steel | | W10113925 | Black | | 8523178 | Biscuit |
| 4 | | Liner, Door | | 8523166 | White | 20 | W10113759 | Strap, Door |
| 6 | 9758162 | Glass, Inner (2) | | 8523167 | Biscuit | 21 | 3196794 | Bracket, Window |
| 7 | 3186289 | Frame, Glass | | 9762250 | Universal Silver | 22 | 3196165 | |
| | | | l | | | 23 | 9761517 | Clip, Door Mntg(2) |

OPTIONAL PARTS (NOT INCLUDED)

For Model: GS563LXSQ1, GS563LXST1, GS563LXSB1, GS563LXSS1 (Designer White) (Designer Biscuit) (Black) (Black Stainless)

No. No. DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828 Wire, Black 12 Ga. 150° c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c 242827 Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832 Kit, Porcelain Repair (White) 242756 Touch–Up Self–Clean(1/2 Pt) 261582 Grease Illus. Part
No. No. DESCRIPTION

INSULATION

261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017 White 72107 Almond 4392899 Biscuit 511873 White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White 350956 Almond 4392901 Biscuit 285006 Superior Black 206922 Primer (White)

PAINT, BULK (1 qt.)

799344 White (Uncut) 978883 Almond (Uncut) 4392900 Biscuit (Uncut) Illus. Part No. No. DESCRIPTION

ACCESSORY PARTS

241430 Foil, Aluminum Oven (18" x 25')

ANTI-TIP KIT

W10017440 Anti-Tip Kit

WIRING HARNESS PARTS

W10095210 Harness, Main
W10045060 Harness, Grnd DSI
8524207 Harness, Bake &
8523599 Harness, Wire
(Cooktop Spark)
3196696 Clip, Harness
3196520 Clip, Wire
3196896 Clip, Wire
3400964 Clip, Wire
313438 Clip, Harness
3196174 Screw, Grnd Hrnss